




Removing the Main controller electronics module from a BFB 3D Touch

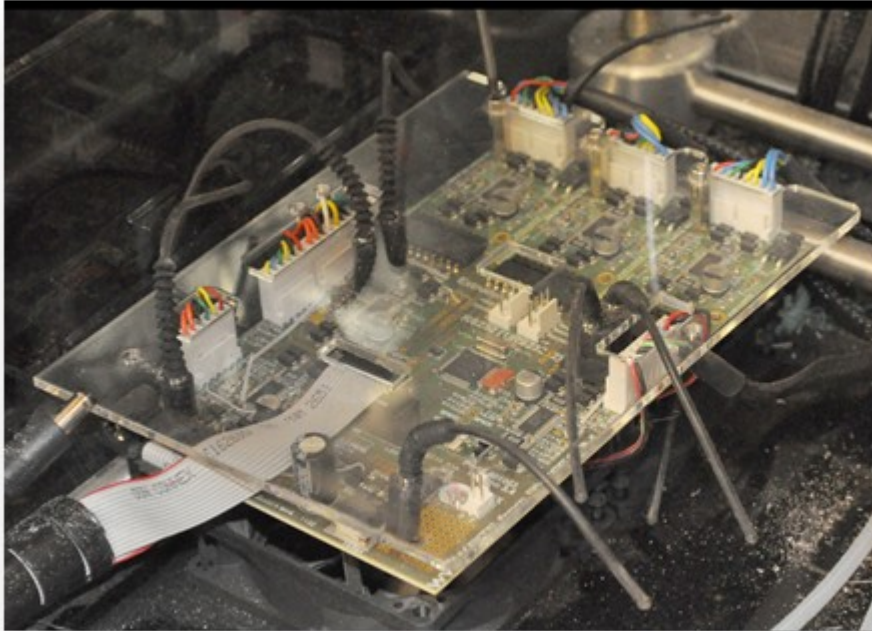


Firstly unplug the power and pull the rubber fasteners so that they are only passing through one hole as pictured.

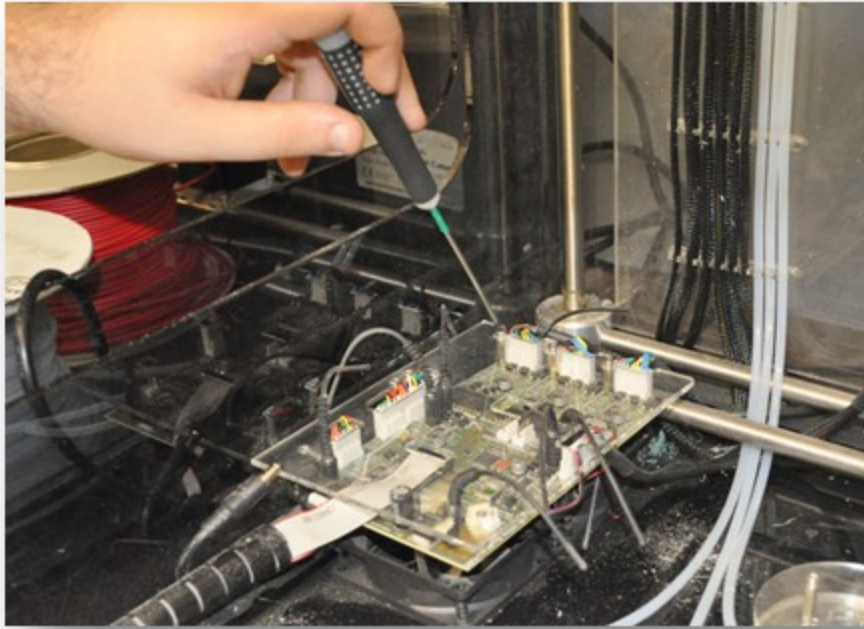


Unscrew the bolts holding the acrylic plate to the extruder modules.

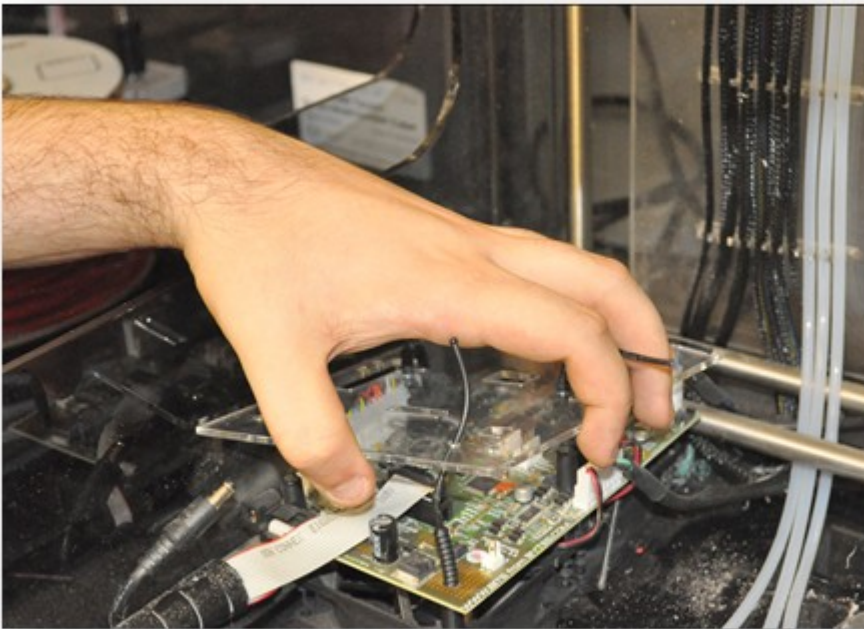


Remove acrylic cover plate by pulling it from the rubber fasteners.

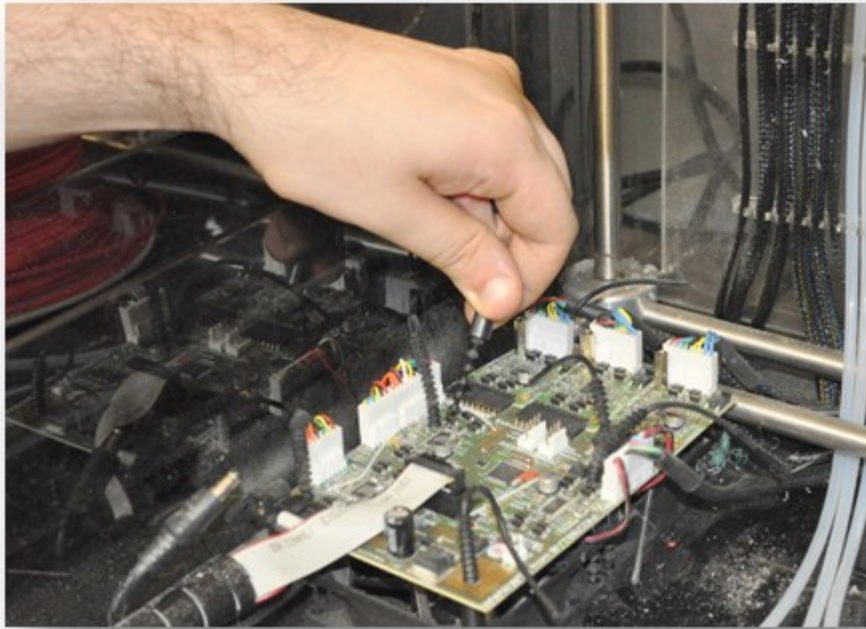

Remove the spacers that are on top of the electronics from the rubber fasteners.

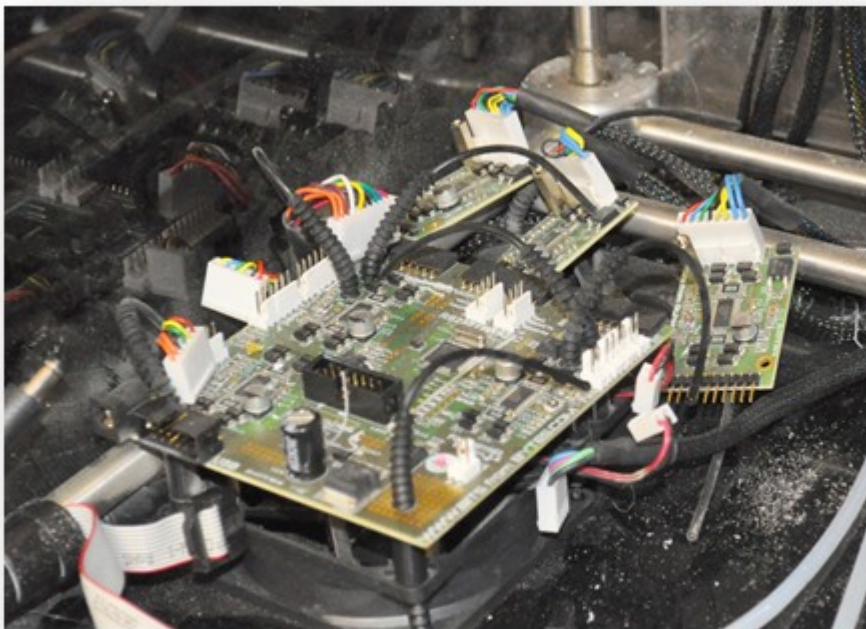

Unplug all looms, ribbon cables and extruder modules from the main controller electronics module.

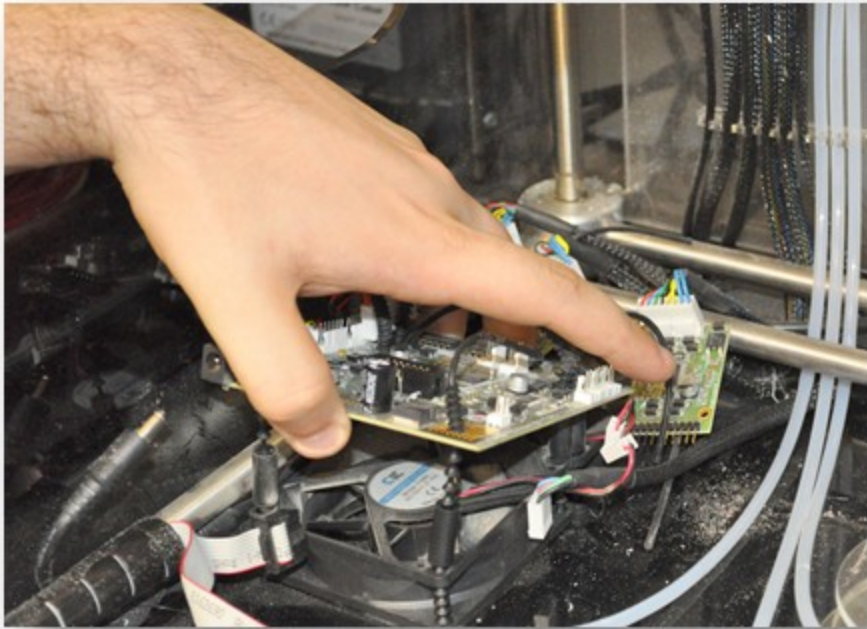

Pull the main controller electronics module from the rubber fasteners.

To re install a new main controller electronics module please follow this manual in reverse.